



Boiling Tank Water Level Measurements



Image A

Warning electrical shock! Unplug water distiller before removing front panel to make any adjustments.

All measurements are from the top of the heater element to the water level (see Image A).

The micro-switches, or actuator bar, should be adjusted accordingly: (see Image B)

- Lower micro-switch activates and turns on the fan and heater element at 1 5/8"-1 3/4".
- Lower micro-switch de-activates and turns off the fan and heater element at 1 1/2". It's very important that you have the distiller shut off at or above 1 1/2".
- Upper micro-switch activates and turns on the feed water solenoid valve at 2"-2 1/4".
- Upper micro-switch de-activates and turns off the feed water solenoid valve at 2 1/2".
- Actuator bar & float rod set screws (2 qty) may be loosened to increase or decrease all settings.

