



Distilled Water Tank Faucet

Part #500515; 500516; 500517 & 500518

If your faucet has a leak at the bottom of the sight gauge (13); Empty Storage Tank, remove the top cap (1) and unscrew the Packing Nut (5). Be Cautious to keep the washers (3 &6) and indicator ball (14). Check the glass tube (4) for any cracks or chips. When re-assembling, make sure the Steel Locking Ring (12) is in it's proper place within the grove at the bottom of the sight gauge (13). Place the larger washer (6) at the bottom of the faucet body (9), place the gauge (13) on top of the washer (6), and hand tighten the Packing Nut (5). There should be 2 rows of threads still visible under the packing nut. Place the glass tube (4) into the gauge, return the indicator ball (14) in the glass tube. Return the upper support (15) (*Not required on the 4" Sight Gauge*). Place the smaller washer (2) into the top cap (1) and screw onto the top of the sight gauge (13). Hand tighten till snug only.

Note: Over-tightening will allow the steel locking ring (12) to jump out of the grove which will cause leaks.

